

Assembly, Operating & Maintenance Instructions

mondo


Attention: Please remove all items from the carton, and verify all pieces before assembly.

MONDO RILEY Chair (with optional arms)

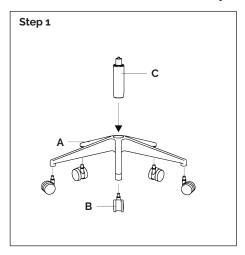

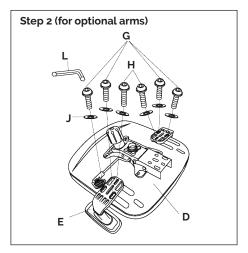

Parts List		
KEY	QTY	DESCRIPTION
Α	1	Base
В	5	Castors
С	1	Gaslift
D	1	Seat
Е	2	Arms
F	1	Back
G	4	Screws (M6 - 25mm)
Н	2	Screws (M6 - 40mm)
1	3	Screws (M8 - 25mm)
J	6	Washers (Ø15x Ø7.5x - T1mm)
K	3	Washers (Ø20x Ø8.5x - T1.5mm)
L	1	Allen key (5mm)
М	3	Washers (Ø13x Ø8x - T2.5mm)

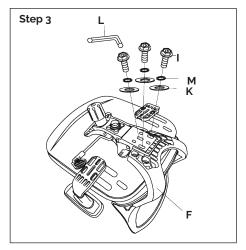



Care and Maintenance

GENERAL CARE

- To maintain the appearance of non-upholstered parts wipe the surface with a clean cloth dampened with a mild detergent solution.
- · Do not remove any parts for separate cleaning.
- · Do not saturate the fabric or interior with water or other cleaning liquids.
- · Do not shampoo clean.
- · Do not clean with hot water extraction machine.
- · Do not clean with onsite drycleaning machine.
- · Protect from direct sunlight, heat and weather.

FABRIC/MESH UPHOLSTERY CARE

- Wipe with a clean cloth dampened with a mild upholstery detergent solution.
- $\boldsymbol{\cdot}$ A soft bristle brush may be used to remove ingrained soil.
- · Spot clean as above.
- · Treat spills and stains as soon as possible.
- · Persistent stains may require treatment by a professional cleaner
- May be cleaned with dry powder cleaners.
- · Allow to dry thoroughly before reuse.

Upholstery & Foam Specs*

FOAM

Flame Resistant: Ca117 Section A Part I & Section D Part II

UPHOLSTERY: FABRIC

Flame Resistance: Ca117 Section E Class I

*This applies only to standard Mondo stock. Any customer specified upholstery may not meet these specifications.

Preventative Maintenance & Warning!

- · Use this product only for seating one person at a time.
- · Do not use this chair as a step stool/ladder
- · Do not sit on any part of the chair except the seat.
- Do not use this chair on uneven floor surfaces.
- · Do not interfere with the operating of the gas lift. · Do not use chair unless all bolts, screws and knobs are tight.
- · At least every six months check all bolts, screws and knobs to ensure they are tight.
- · If any parts are missing, broken, damaged or worn do not use the product until repairs are made using factory authorised parts.
- · Dispose of packaging properly.
- · Plastic bag is not a toy.
- · Do not use plastic bag as a head covering as it may cause suffocation
- ${\boldsymbol \cdot}$ Failure to follow these warnings could result in serious injury.

