




Quickfold Archive Box


Assembly Instructions



1.

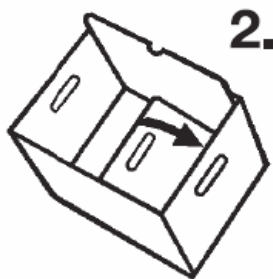


2.

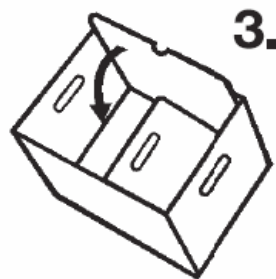


3.

Carton Assembly


Lid Assembly

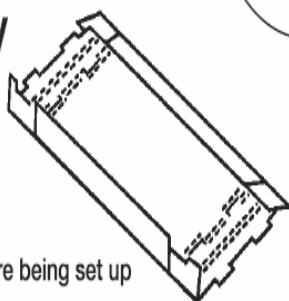

1. Lid before being set up

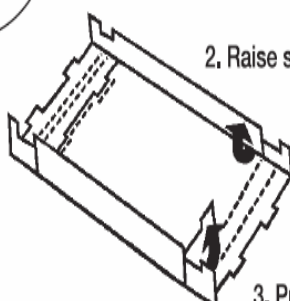

2. Raise sides

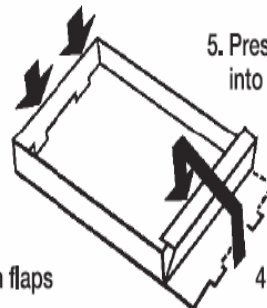

3. Push in flaps

5. Press down
into notches

4. Raise ends

Ref. No. 80011

Made in Australia

Distributed by ACCO Australia

www.marbig.com