




Binder Archive Box

Assembly Instructions

ASSEMBLY INSTRUCTIONS

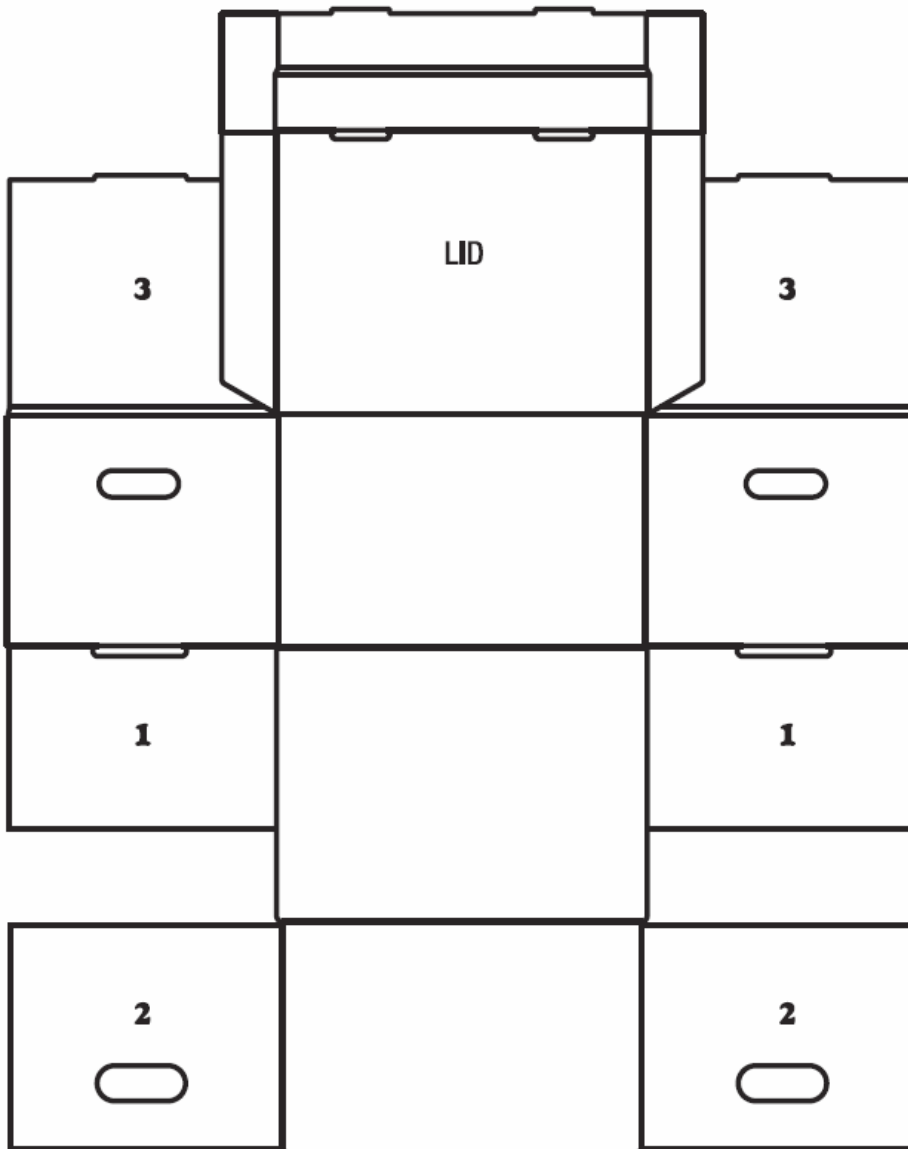

BOX

Step 1.
Raise sides containing
flaps 1 and 3.

Step 2.
Fold in flaps marked
1 to form base
inner layer.

Step 3.
Raise side containing
flaps marked 2.

Step 4.
Fold in flaps marked
2 to form wall inner
layers.

Step 5.
Fold over flaps marked
3 and lock tabs into
base slots.

LID

Step 1.
Fold in 2 sides and
form right angles with
shorter flap extensions.

Step 2.
Roll over front flaps
and lock tabs into slots

Ref. No. 800500

Made in Australia

Distributed by ACCO Australia

www.marbig.com