


Assembly, Operating & Maintenance Instructions

Remove all items from the carton. Verify all pieces before assembly.


buroseating

BURO MAYA RECLINER

STEP 1.

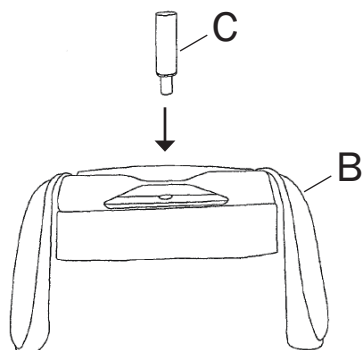


STEP 2.

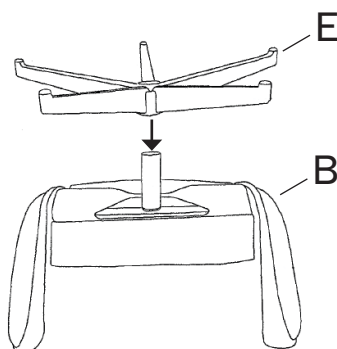


Keep the center of the base aligned with the short line on the plastic cover.

STEP 3.

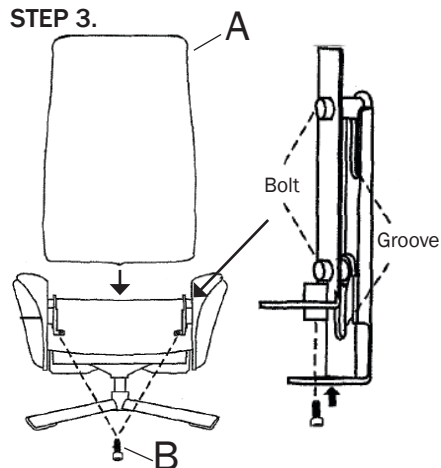


Slide bolts on backrest into the grooves on the seat and tighten screws from the bottom.

STEP 4.

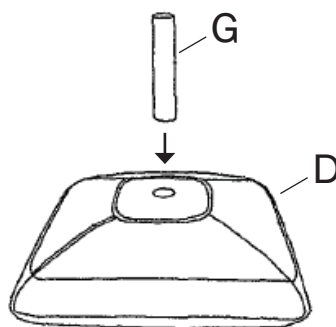

STEP 5.

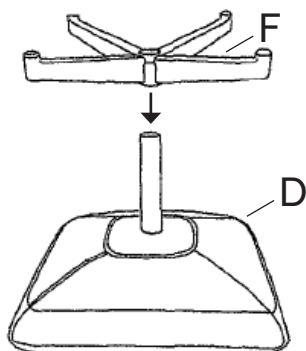

STEP 6.



PART LIST

KEY	QTY	DESCRIPTION
A	1	Backrest
B	1	Seat
C	1	Gas Lift
D	1	Footrest
E	1	5 Star Base
F	1	4 Star Base
G	1	Pedestal Pole
H	2	Screws

CARE & MAINTENANCE

GENERAL CARE

To maintain the appearance of non-upholstered parts wipe the surface with a clean cloth.

Do not remove any parts for separate cleaning.

Do not saturate the fabric or interior with water or other cleaning liquids.

Do not shampoo clean.

Do not clean with hot water extraction machine.

Do not clean with onsite drycleaning machine.

Protect from direct sunlight, heat and weather.

UPHOLSTERY CARE FOR LEATHER

- Wipe with a clean dry cloth
- Every 2-3 months use leather cleaning agent or household vacuum cleaner for cleaning or dusting
- Use only leather care products suitable for top coated leather and strictly in accordance with the manufacturer's instructions
- Spot clean as above
- Treat spills and stains as soon as possible
- Persistent stains may require treatment by a professional cleaner
- Allow to dry thoroughly before reuse.

UPHOLSTERY & FOAM SPECS*

FOAM

Flame Resistant: Ca117 Section A Part I & Section D Part II

UPHOLSTERY: LEATHER

Flame Resistance: Ca117 Section E Class I

*This applies only to standard Buro stock. Any customer specified upholstery may not meet these specifications.

PREVENTATIVE MAINTENANCE & WARNING!

- Use this product only for seating one person at a time.
- Do not use this chair as a step stool/ladder.
- Do not sit on any part of the chair except the seat.
- Do not use this chair on uneven floor surfaces.
- Do not interfere with the operating of the gas lift.
- Do not use chair unless all bolts, screws and knobs are tight. At least every six months check all bolts, screws and knobs to ensure they are tight.
- If any parts are missing, broken, damaged or worn do not use the product until repairs are made using factory authorised parts.
- Dispose of packaging properly.
- Plastic bag is not a toy.
- Do not use plastic bag as a head covering as it may cause suffocation.
- Failure to follow these warnings could result in serious injury.